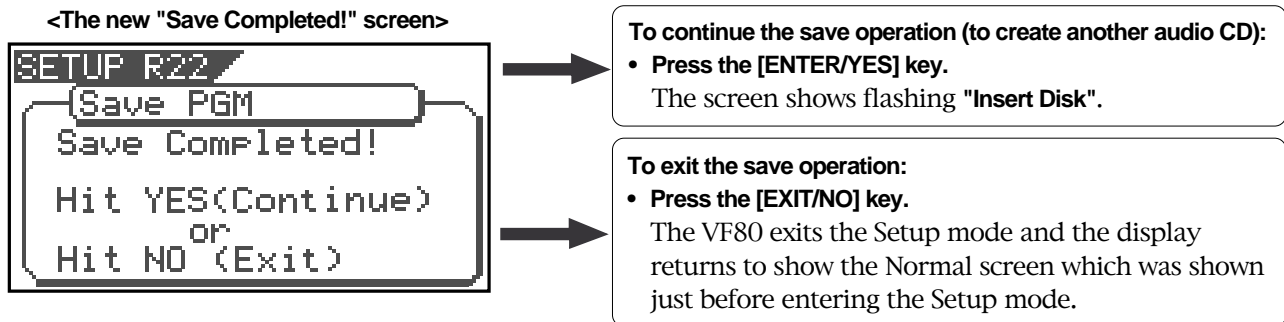 



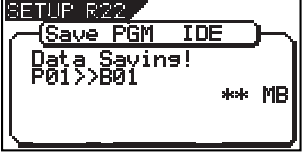 
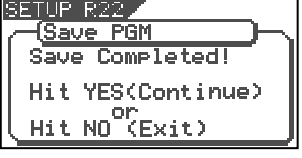 


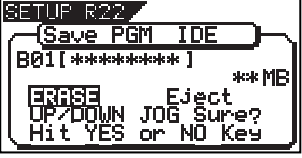 
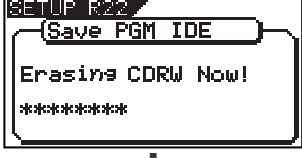 
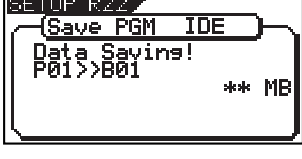 
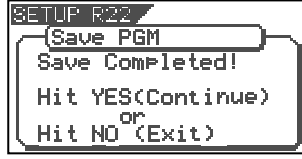 
# Model VF80 Owner's Manual Supplement

## <Expanded functions for making an audio CD>

After completing the save operation with the VF80 previous version, the VF80 exits the save operation while "Save Completed!" is shown on the display, as described on page 115 through 117 ("Making an audio CD") in the main owner's manual. With the new software version, after completing saving data to a disc, you can select whether to create another audio CD with same data or to exit the save operation.



To continue the save operation, carry out either procedures below according to the disc used.

When using an blank disc	When using a recorded disc	
<p><b>1. Insert an blank disc.</b> After reading the disc, the VF80 starts the save operation.</p>  <p>↓</p>  <p>When the save operation is completed, "Save Completed!" is shown and the disc is ejected.</p>  <p>To continue the save operation (for making an audio CD), repeat the same procedure as above.</p>	<p><b>1. Insert a recorded disc.</b> After showing "Not Empty!", the display shows the screen for selecting whether to erase disc data or eject the disc.</p>  <p>↓</p>  <p>↓</p>  <p>To eject the disc, use the [JOG] dial (or the [CURSOR &gt;] key) to highlight "Eject" then press the [ENTER/YES] key.</p>	<p><b>2. Press the [ENTER/YES] key while "ERASE" is highlighted.</b> The VF80 starts erasing data. While the erase operation is in progress, "Erasing CDRW Now!" is shown on the display, while asterisks (**) fill up from left to right.</p>  <p>↓</p>  <p>After the erase operation is completed, the save operation immediately starts. When the save operation is completed, "Save Completed!" is shown and the disc is ejected.</p>  <p>To continue the save operation (for making an audio CD), repeat the same procedure.</p>