

# FOStex®

## WAV Manager (V2.1) operation manual (for Windows)



# Please read before using

## Allowance of use

The specifications of this software and the contents of this document are subject to change without prior notice. Be assured Fostex Company is not responsible for any warranties or any supports for any direct or indirect losses or damages occurred from use of this software application or this document.

The WAV manager is a freeware application and anyone can use it.

The copyright of this software application is reserved by Fostex Company. Sales distribution, lease or rental of this software application, or any modifications to this software application without permission are prohibited.

Note that this software application is not a commercial product. Therefore, Fostex Company and its distributors/service stations are not able to answer to any questions such as concrete process or operation methods by telephones, e-mails etc.

## Summary

“WAV Manager” is a utility software application that enables you to import each audio track from a song created by the Fostex MR series Multitrackers into the PC as a standard mono WAV file (sixteen files for an 16-track song). Also, you can export WAV file data created and edited in the PC to the MR series Multitracker, as well as you can burn audio CDs.

## Operating Environment


WAV Manager (V2.1) operates on Windows XP Home Edition and Windows XP Professional Edition. (\* To use WAV Manager V1.10 with the MR-8, the MR-8 software version must be 1.20 or later.)

## Starting & exiting WAV Manager

1. Set the “USB Device Mode” item in the MENU mode of your MR series Multitracker to “USB mode” (See the operation manual of your multitracker for details about how to set the “USB Device Mode” item).
2. Connect your multitracker to your PC using a USB cable.
3. Start WAV Manager.

**<Notes>**: If you set your MR series Multitracker to the USB mode while WAV Manager is running, quit WAV Manager and start WAV Manager again. To quit WAV Manager, click the close box on the upper right of the window.  
To burn stereo WAV files on your PC to an audio CD, you do not need to connect your MR series Multitracker to your PC (see page 9).

When the MR series Multitracker is in the USB mode, the “Removable Disk” drive is shown in “Devices with Removable Storage” on the desktop of the PC, as shown below. If it is not shown, check USB mode setting and USB cable connection. When you use WAV Manager, make sure that “Removable disk” is shown.

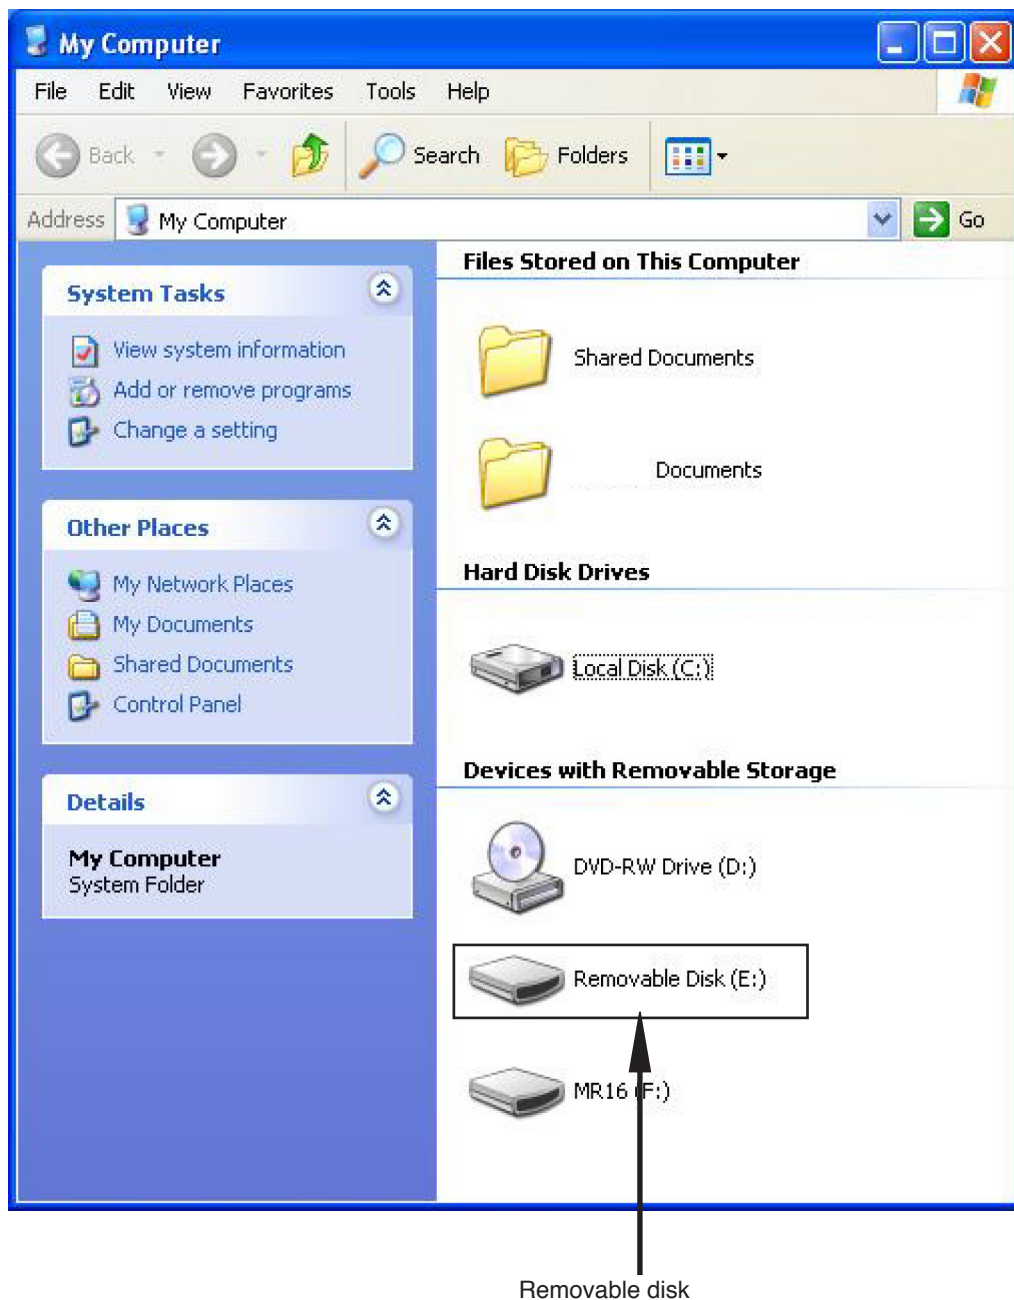


## Starting WAV Manager


Double-click “WAV Manager” on the PC to start WAV Manager.

The WAV Manager window as below is shown. This window allows you to import song data of the MR series Multitracker into the PC. You can switch the window among “MR to PC”, “PC to MR” and “CD Writer” windows by clicking the appropriate control tab.

The left part of each window shows the directory tree, in which “My computer” is the root. You can select a desired directory here.

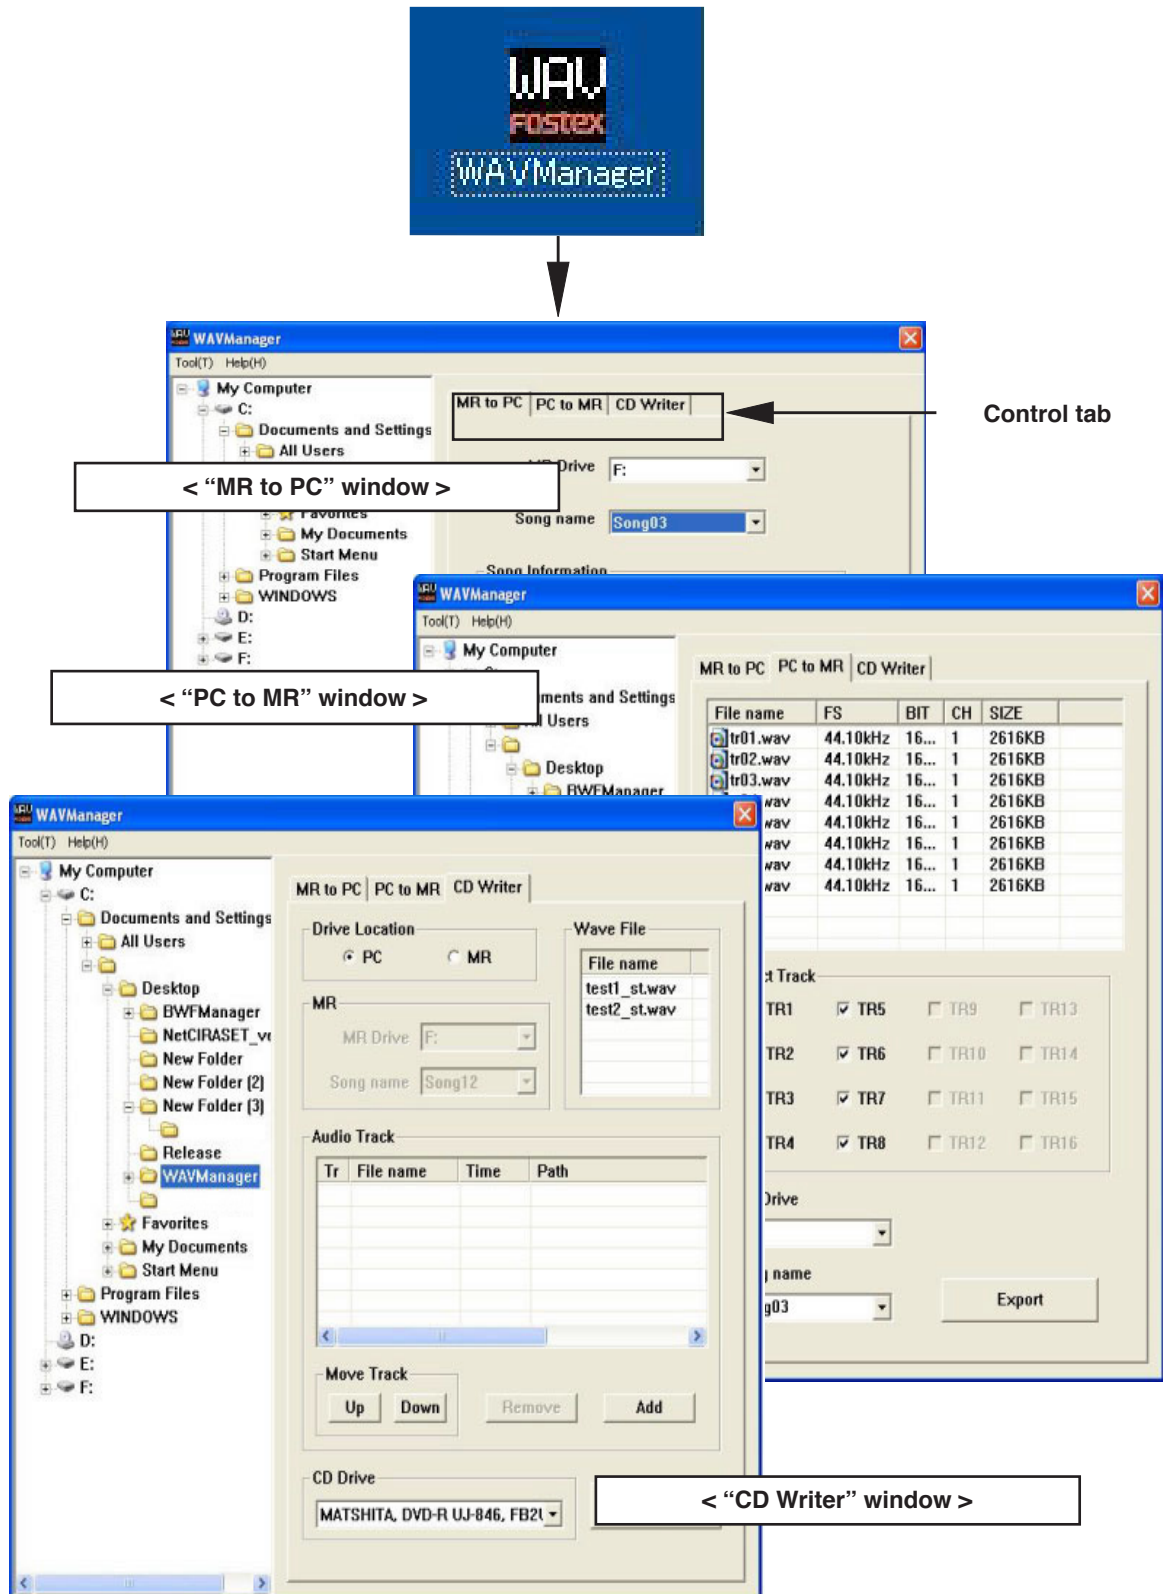

# Importing a song on the MR series Multitracker to the PC

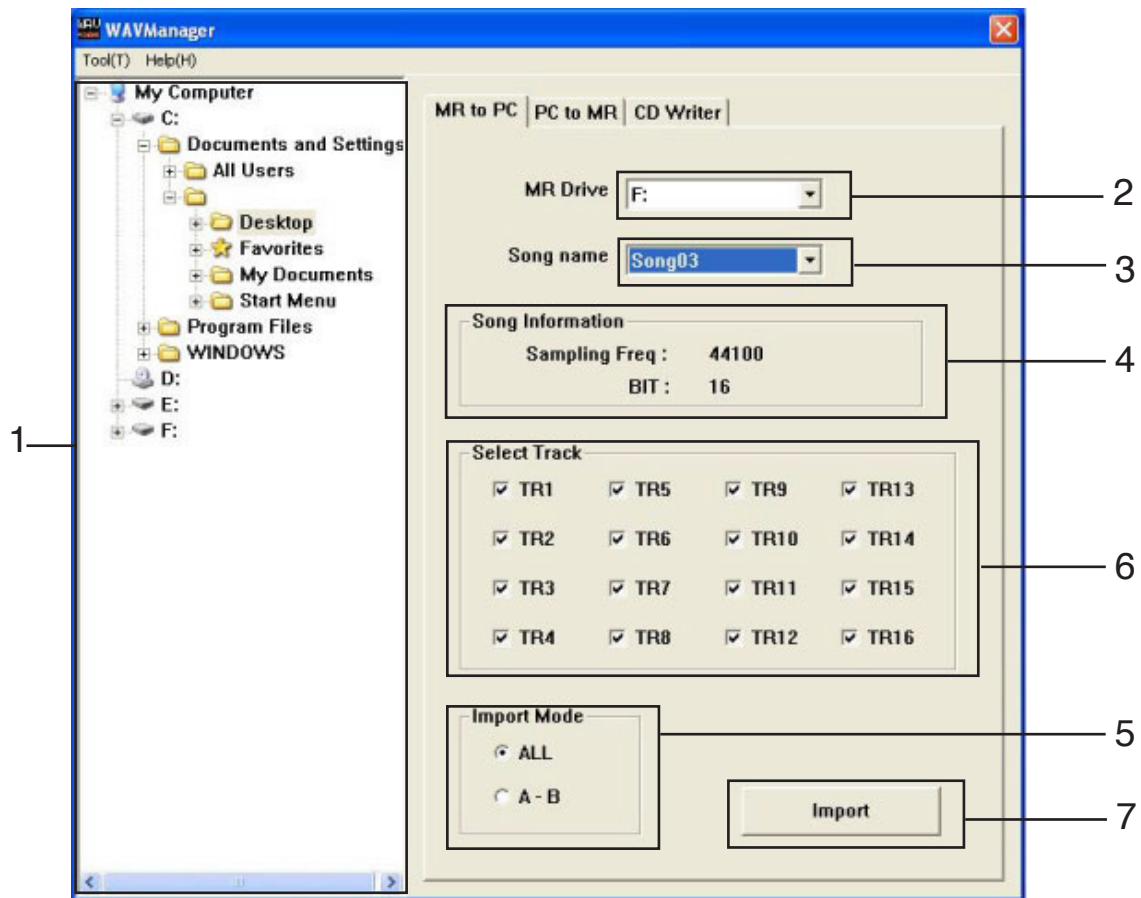

## 1. Directory tree

From the directory tree, select the destination folder for the imported file.

## 2. MR Drive

The available MR series Multitracker drives are listed in the “MR Drive” combo box. When more than one drive is listed, you can select a desired drive from the pulldown menu shown by clicking ▼.

In the “Song name” combo box, all song names on the currently selected drive is listed.

## 3. Song name

In the “Song name” combo box, all songs on the drive selected in the “MR Drive” combo box is listed.

Select a desired song from the pulldown menu which appears when you click ▼. The song data is read from the corresponding song folder.

The sampling frequency and bit information is shown in the “Song Information” section, while the appropriate checkboxes in the “Select Track” section are enabled depending on available tracks in the song.

#### 4. Song Information

The song information of the selected song is shown.

The “Sampling Freq” item shows the sampling frequency, while the “BIT” item shows the quantization bit number. In the example on page 5, the sampling frequency is 44.1kHz, while the quantization bit number is 16.

#### 5. Select Track

Depending on available tracks in the song, the appropriate checkboxes for tracks are enabled (checked). You can import only enabled tracks.

Clicking a checked checkbox unchecks it. Clicking it again checks the checkbox.

#### 6. Import Mode

There are two import modes: “ALL” and “A-B”.

In the “ALL” mode, all data between ABS 0 and REC END of the tracks selected by the “Select Track” section are imported. In the “A-B” mode, data between Locate point A and B specified by the MR series Multitracker are imported. In the “A-B” mode, if you attempt to import data when Locate point A is ahead of Locate point B (A>B), the error message is shown and the operation is cancelled.


#### 7. [Import] button

Clicking the [Import] button starts importing the selected track/song data. Each track data is imported as a single WAV file.


While data is imported, the status window as below appears. The imported file is stored to the folder selected in the directory tree section.

If you click [Cancel] while importing data, the import operation is cancelled.


If the import operation is interrupted by an error or clicking [Cancel], the incomplete file is deleted.

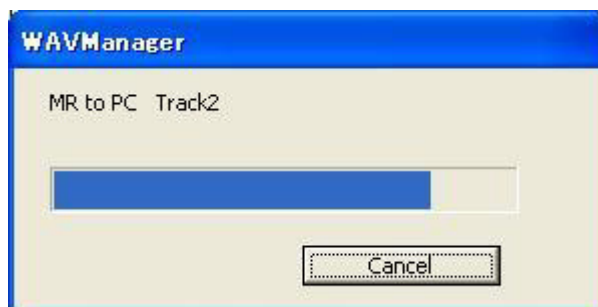

**<Note>**: If the same track data exists in the destination folder, clicking the [Import] button brings up the alert message window as shown on the right. If you overwrite the existing file, click [OK]. If you do not overwrite the existing file, click [Cancel].

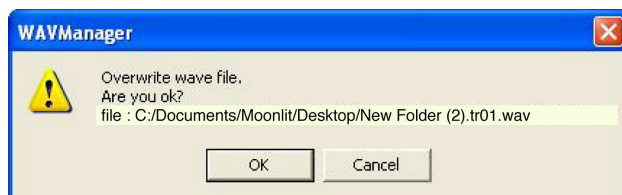

# Exporting a song on the PC to the MR series Multitracker

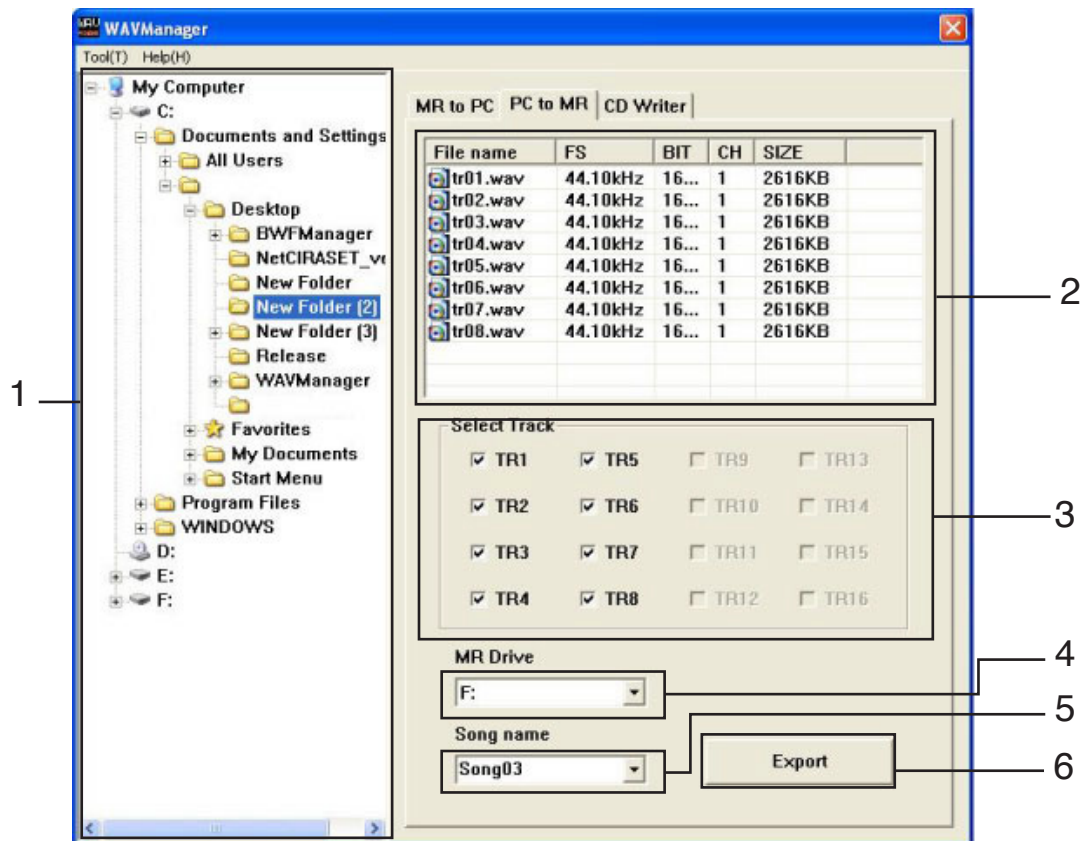

## 1. Directory tree

From the directory tree, select the folder which contains the WAV files to be exported.

## 2. File list

All the WAV files in the folder selected from the directory tree are shown together with the Fs, bit length, number of channels and size.

## 3. Select Track

Depending on available wav files in the selected folder, the appropriate checkboxes are enabled (checked). You can import only enabled tracks.

With the WAV Manager, you can only export files whose file names are of the form "tr\*\*.wav" (\*\* shows the track number). Note that uppercase and lowercase characters are not distinguished.

Clicking a checked checkbox unchecks it. Clicking it again checks the checkbox.

## 4. MR Drive

The available MR series Multitracker drives are listed in the "MR Drive" combo box. When more than one drive is listed, you can select a desired drive from the pulldown menu shown by clicking ▼.

In the "Song name" combo box, all song names on the currently selected drive are listed.



## 5. Song name

In the “Song name” combo box, all songs on the drive selected in the “MR Drive” combo box is listed. Select a desired destination song from the pulldown menu which appears when you click ▼. At the bottom of the pulldown menu, “---: (New Song)” is shown.

If you select an existing song, the exported files overwrite song data. If you select “---: (New Song)”, the files are exported to a newly created song. Therefore, if you do not want to overwrite an existing song, select “---: (New Song)” as the destination song.

When you select “---: (New Song)”, the default new song name is shown. You can edit the song name at this stage, therefore, you can export files to a new song with a desired name.

**<Note>**: If you select an existing song and export a file after editing the song name, the file is exported to the new song, as with exporting to “---: (New Song)”.

## 6. [Export] button

If you click the [Export] button, either of the following windows appears depending on whether you select an existing song or new song in the “Song name” combo box.




<When selecting a new song>




<When selecting an existing song>

Clicking the [OK] button of the left window above creates a new song on the drive and starts exporting the files to the new song. Clicking the [OK] button of the right window above starts exporting the files which overwrite the existing files. While exporting files, the progress bar window as below is shown.

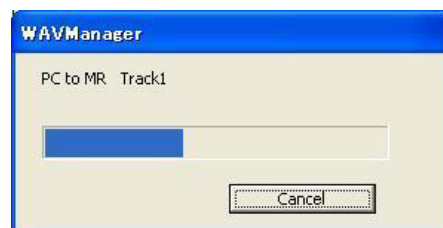

If the format of the destination song does not match the format of track files, the error message is shown and the operation is interrupted. If the export operation is interrupted by an error or clicking [Cancel], no file is created.

**<Note>**: If the remaining space of the destination drive is too small, the alert message window as shown on the right appears. Clicking [OK] cancels the operation and dismisses the window. Reserve the enough space for recording on the destination drive and retry again.

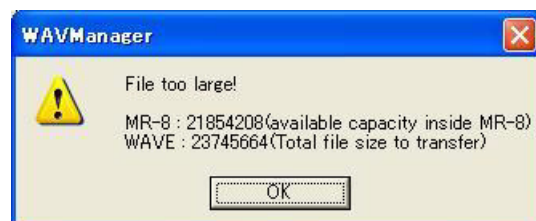




# Burning an audio CD

Using the CD-R/RW drive installed on the PC (or connected to the PC), you can burn an audio CD. You can write stereo WAV files in the “2MIX folder” in the song folder of the MR series Multitracker or on the PC. When you write stereo WAV files on the PC, you do not need to connect the MR series Multitracker to the PC.

**<Note>**: Using the WAV Manager, you can write data only in “track at once” mode. Note that depending on your PC environment, you may not be able to burn an audio CD correctly.

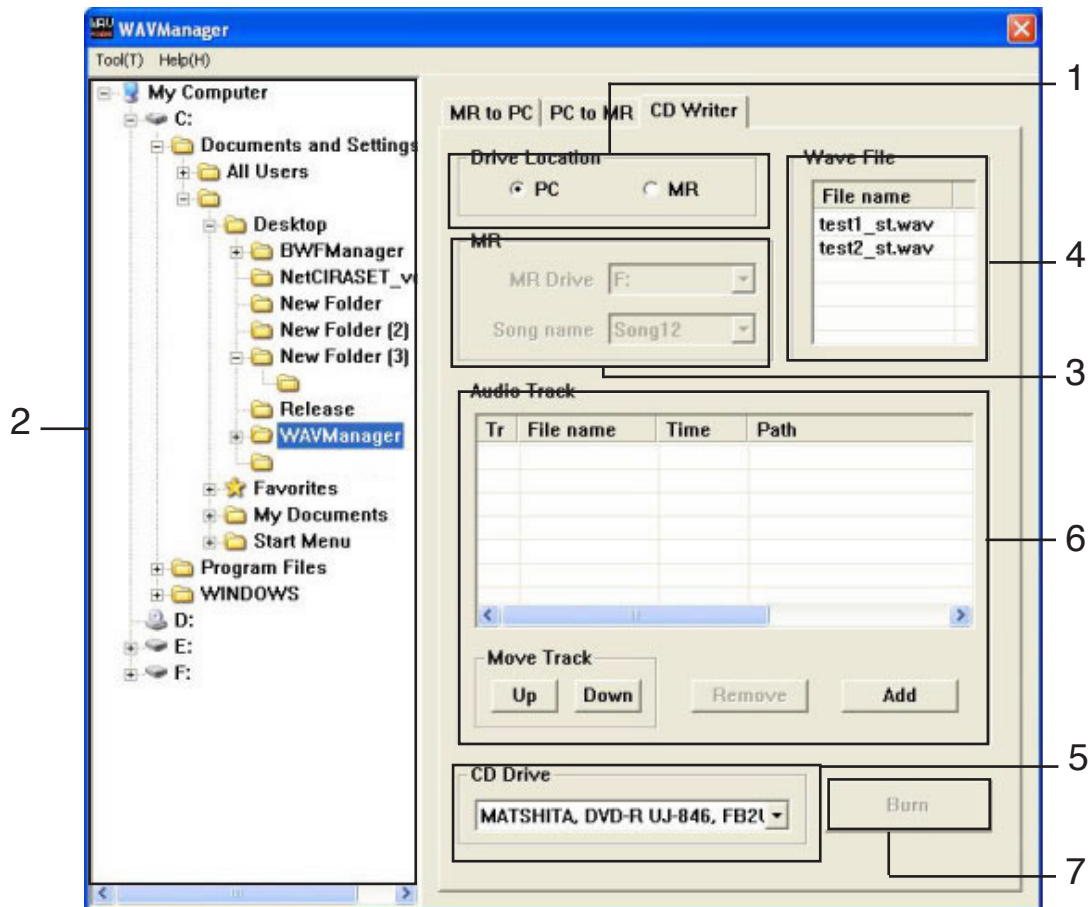

## 1. Drive Location

Selects the source drive (“PC” or “MR”) which contains the stereo WAV files you want to write.

To write stereo WAV files on the PC to an audio CD, select “PC”. When “PC” is selected, you can select a folder in the directory tree.

To write stereo WAV files in the “2MIX folder” of the MR series Multitracker to an audio CD, select “MR”. When “MR” is selected, you can select desired drive and song in the “MR” box below “Drive Location”.

## 2. Directory tree

Only when “PC” is selected in the “Drive Location” section, you can select a folder which contains WAV files you want to write. When selecting a folder, the WAV files in the selected folder are listed in the “Wave File” section.

### 3. MR section

Only when “MR” is selected in the “Drive Location” section, you can select “MR Drive” and “Song name” in this section.

#### 3-1. MR Drive

You can select a MR series Multitracker drive from the pulldown list of the currently available MR series Multitracker drives shown by clicking ▼ .

#### 3-2. Song name

You can select a desired song from the pulldown list of the available songs shown by clicking ▼ . All the stereo WAV files in the “2MIX folder” of the selected song are listed in the “Wave File” section.

### 4. Wave File

All the writable stereo WAV files in the folder selected from the directory tree or in the song selected in the MR section are listed.

Only common 44.1-kHz/16-bit stereo WAV files are listed.

You can add a currently highlighted file to the Audio Track list by clicking the [Add] button.

### 5. CD Drive

You can select a CD-R/RW drive from the pulldown list of the currently available CD-R/RW drives shown by clicking ▼ .

### 6. Audio Track

You can write stereo WAV files listed here to a CD-R/RW disc in the listed order.

#### 6-1. [Add] button

Clicking the [Add] button adds a currently highlighted file in the “Wave File” section to the Audio Track list.

*<Note>: If you click the [Add] button when no disc is set to the drive, the alert message window on the right appears. Click [OK] and set a disc to the drive, then click the [Add] button again.*



#### 6-2. Move Track ([Up]/[Down] buttons)

You can move tracks in the “Audio Track” list in the desired order.

By selecting a track and clicking the [Up] or [Down] button, the track moves up or down.

**<Note>**: If you select the uppermost track in the list and click the [Up] button or select the lowermost track and click the [Down] button, the alert message window on the right appears. Press [OK] and reselect a track, then press the [Up] or [Down] button.




### 6-3. [Remove] button

By selecting a track in the Audio Track list and clicking the [Remove] button, you can remove the track from the list.

## 7. [Burn] button

By pressing the [Burn] button, you can start writing the files in the Audio Track list to the CD-R/RW disc. During burning, the progress bar window as below is shown.


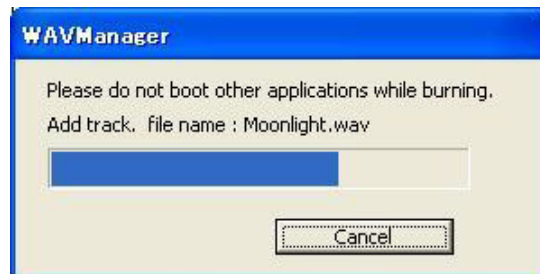


During burning, while “Add track” is shown on the window as above (i.e. an audio block is being added), you can cancel the operation by clicking the [Cancel] button. If an error occurs during burning, the error message is shown and the operation is cancelled.

When burning is successfully completed, the disc is automatically ejected.


## About the menu bar

There are “Tool (T)” and “Help (H)” menus in the menu bar at the top of the WAV Manager window. The “Tool (T)” menu contains “Drive/Medium (D)”, while the “Help (H)” menu contains “About WAVManager (A)”.

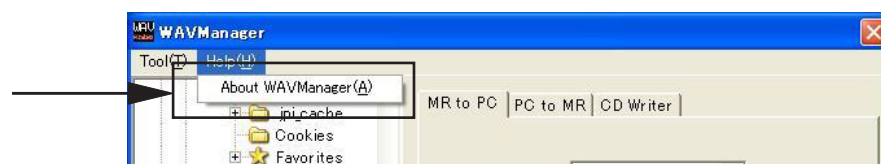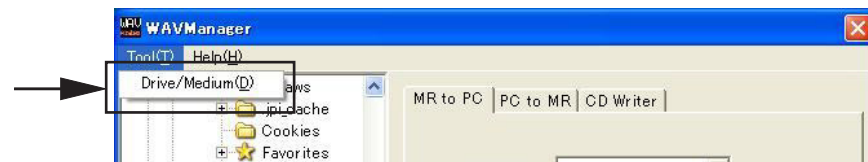

## Drive/Medium (D)

Clicking “Drive/Medium (D)” brings up the following dialog window, which shows the drive and media information, as well as allows you to erase a CD-RW disc.

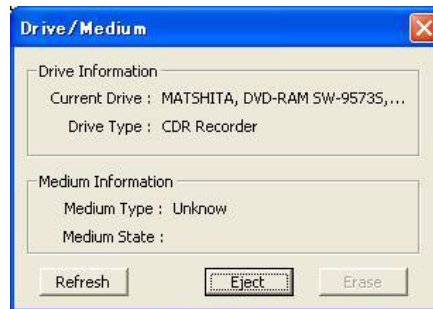

### Drive Information

Shows the name and drive type of the currently selected drive.

### Medium Information

Shows the medium type and status of the currently loaded disc.

### [Refresh] button

Clicking this button updates the information in the window.

When you erase a disc or change a disc, press the [Refresh] button. Otherwise, the information is not updated.

### [Eject] button

Clicking this button opens the drive tray.


### [Erase] button

When a CD-RW disc which contains audio data is set to the drive, clicking this button erases data.

Note that you cannot cancel erasing once you start erasing.

## About WAVManager (A)

Clicking “About WAVManager (A)” brings up the following dialog window, which shows the WAV Manager version.

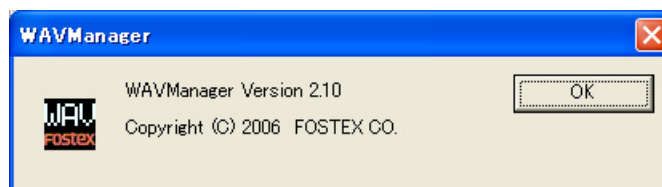

### Notes on drive access

- While the “CD Writer” top window (shown on page 9) or “Drive/Medium” dialog window is shown, the WAV Manager sometimes accesses the drive for executing the operation. Therefore, if another application (or the OS) and the WAV Manager attempt to access disc at the same time, an error may occur. In such a case, retry after a while.
- The WAV Manager may malfunction if any other CD writing software application or drive utility of a third party is installed on the PC.

